



PCAN-Explorer 7 | Floating License: How to Set Up a Server

This is the official guide to set up a server for a PCAN-Explorer 7 Floating License. These types of licenses can be hosted on a server. This can be any Windows computer, a Linux installation, even on single-board computers, or a MacOS environment. In this document, this kind of computer is referred to as license server. On start, PCAN-Explorer scans for licenses also on the LAN and automatically finds a floating license that is hosted on a license server.

Before You Start

Before you can start, you need one or several activated floating licenses - either on your Windows computer used for serving or on a license dongle that can be used in any supported OS environment.

For the server you need the **CodeMeter User Runtime** from Wibu-Systems, which is available for Windows, Linux, and MacOS. The setup files are freely available on the Wibu download page.


[Download Wibu CodeMeter Runtime](#)



PCAN-Explorer 7 | Floating License: How to Set Up a Server


Step 1

Install the previously downloaded **CodeMeter User Runtime**. Tip: As an alternative, you could also use a computer with PCAN-Explorer installation, as this has the CodeMeter User Runtime already installed. However, a dedicated server computer should be preferred.

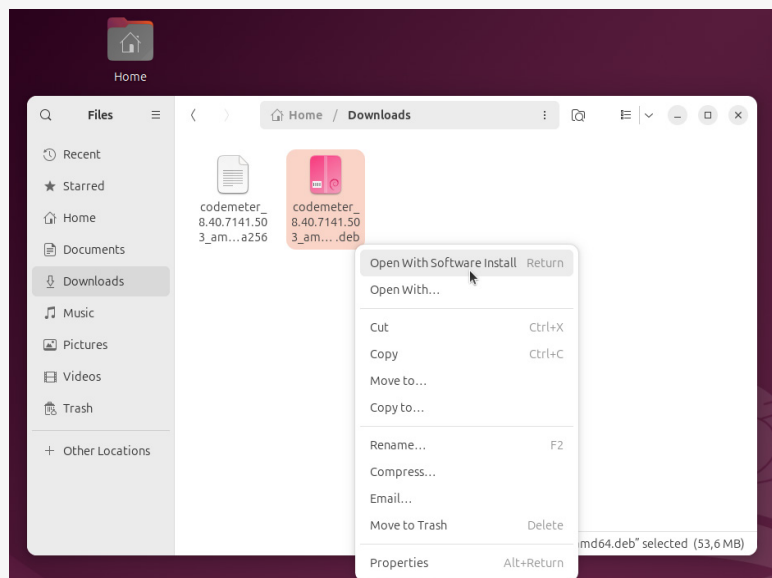

Step 2

Next, open CodeMeter WebAdmin in a web browser by using the following URL: <http://localhost:22352>

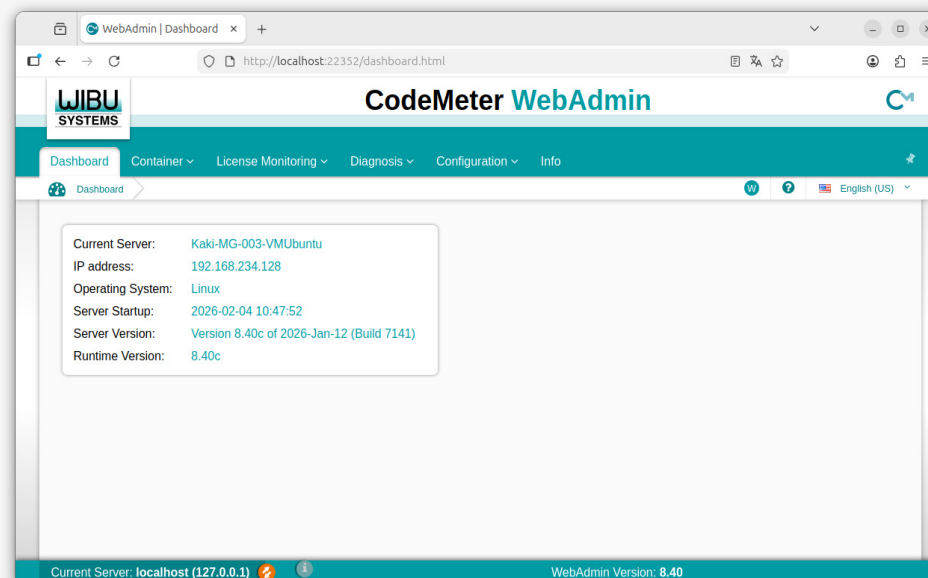



PCAN-Explorer 7 | Floating License: How to Set Up a Server

Step 3

On the **CodeMeter WebAdmin** page, navigate now to *Configuration > Server > Server Access*.

On the **Network Server** panel, make sure that *Enable* is checked.

Server Access | License Access Permissions | License Transfer Configuration

Network Server

Disable

Enable

Network Port:

Step 4

Click on the **License Access Permission** tab.
On the **Mode** panel, make sure that *Basic* is checked.

Server Access | **License Access Permissions** | License Transfer Configuration

Mode

Basic

Advanced

CodeMeter Server is currently running in License Access Permission Mode: **Basic**

Congratulations, your license server now provides the license(s).
You can now start using PCAN-Explorer 7!



Note

If you keep your license(s) on a license dongle, make sure that it is plugged in your license server.